


Traditional Adirondack Chair

Assembly Instructions

A041-001-001


SERWALL
ONE DAY , MEET YOUR ADIRONDACK

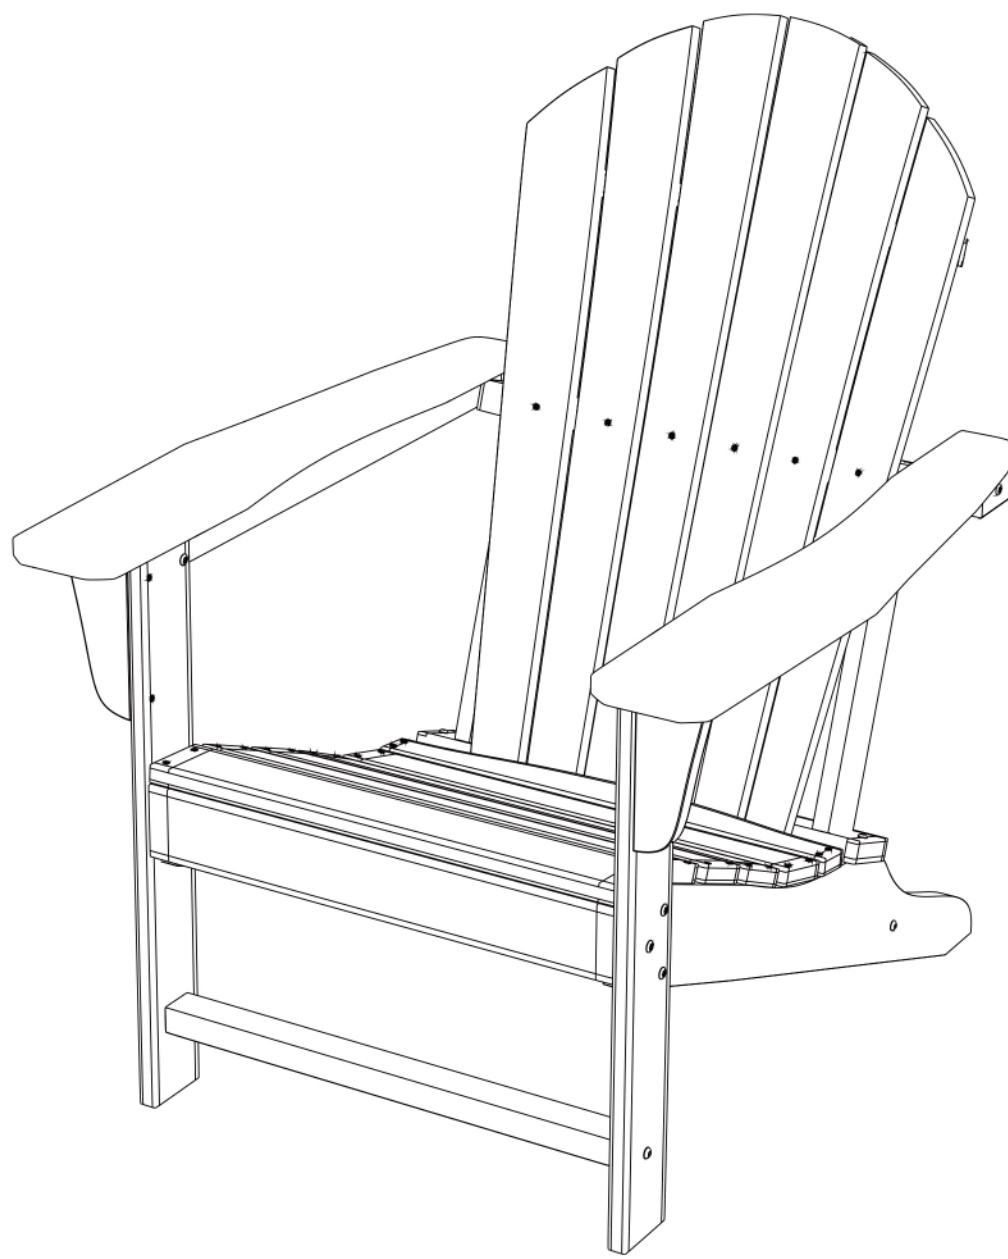

Important - Please read these instructions fully before starting assembly

HASSLE-FREE WARRANTY

Serwall stand behind the quality of our products.
For full warranty policy, email: SERWALL@patioadirondack.com



380 LBS
CAPACITY



1 PERSON
ASSEMBLY



AROUND 15 MIN.
ASSEMBLY

Safety & Care Advice

If you need help or have damaged or missing parts,
please email: SERWALL@patioadirondack.com

Important - Please read these instructions fully before starting assembly

Check you have all the components and tools listed
on the pages 3.

Remove all fittings from the plastic bags and
separate them into their groups.

Keep children and animals away from the work
area, small parts may cause choking if swallowed.

Make sure you have enough space to layout the
parts before starting.

Assemble on a soft level surface to avoid damaging
the unit or your floor.

Do not stand or put weight on the product, this could
cause damage.

Assemble the item as close to its final position (in the
same area) as possible.

Do not place furniture directly in front of radiators,
fires or any other source of heat.



The assembly will be easier
with 2 people while 1 person
could also do the job.



Scan the QR code for assembly
videos, or visit:
<https://youtu.be/n6H4UiDZ7qU>

General care & maintenance

Using damp cloth and mild detergent for routine
maintenance, do not use blench or abrasive
cleaners.

From time to time check that there are no loose
screws on this unit.

Clean & Sanitize Tips


Use this method for a quick clean-up here and there throughout the season — adding in the bleach solution
to easily sanitize and eliminate any stubborn stains or dirt build-up from the winter months.

- Mix mild dish soap and warm water in a bucket.
- Use a clean cloth to wipe the soapy mixture onto the surfaces of your furniture, cleaning off any dirt.
- For extra cleaning power or to sanitize, mix 1/3 bleach and 2/3 water.
- Apply bleach mixture to furniture with a clean cloth and allow it to sit on the lumber for a few minutes (this will not affect the color).
- Loosen any dirt and debris that may catch in the surface grooves of the lumber by scrubbing the bleach mixture with a soft-bristle brush.
- Rinse thoroughly using a garden hose with a spray nozzle.

Components

If you need help or have damaged or missing parts,
please email: SERWALL@patioadirondack.com





Please check you have all the components listed below.

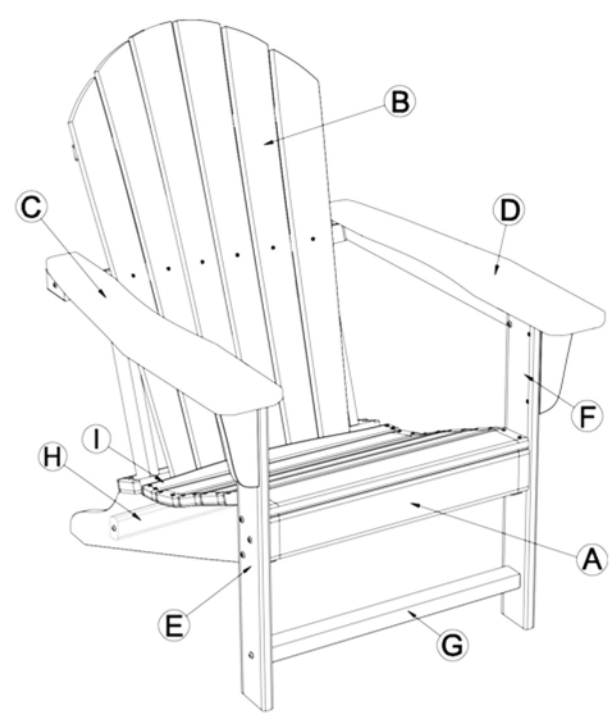

#	Description	Qty.
A	Chair Seat Frame	1
B	Chair Back	1
C	Right Arm	1
D	Left Arm	1
E	Right Leg	1
F	Left Leg	1
G	Front Stretcher	1
H	Back Stretcher	1
I	Back Seat Rail	1

Hardware & Tools


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings
may be supplied than required.

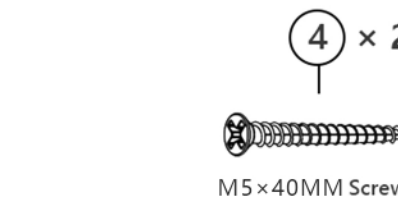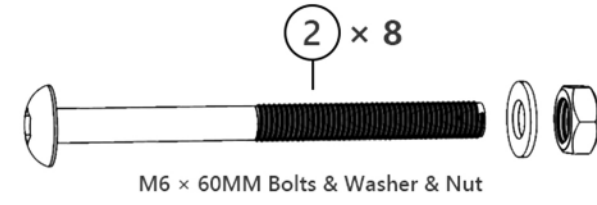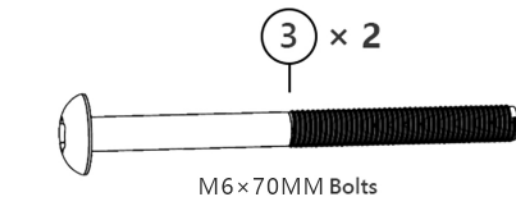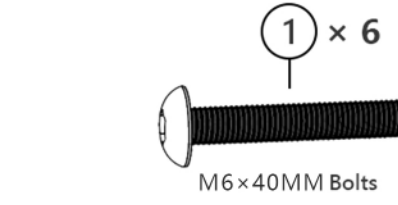

Assembly Instructions

If you need help or have damaged or missing parts,
please email: SERWALL@patioadirondack.com

⚠ Caution: Please do not over-tighten bolts and screws during assembly.

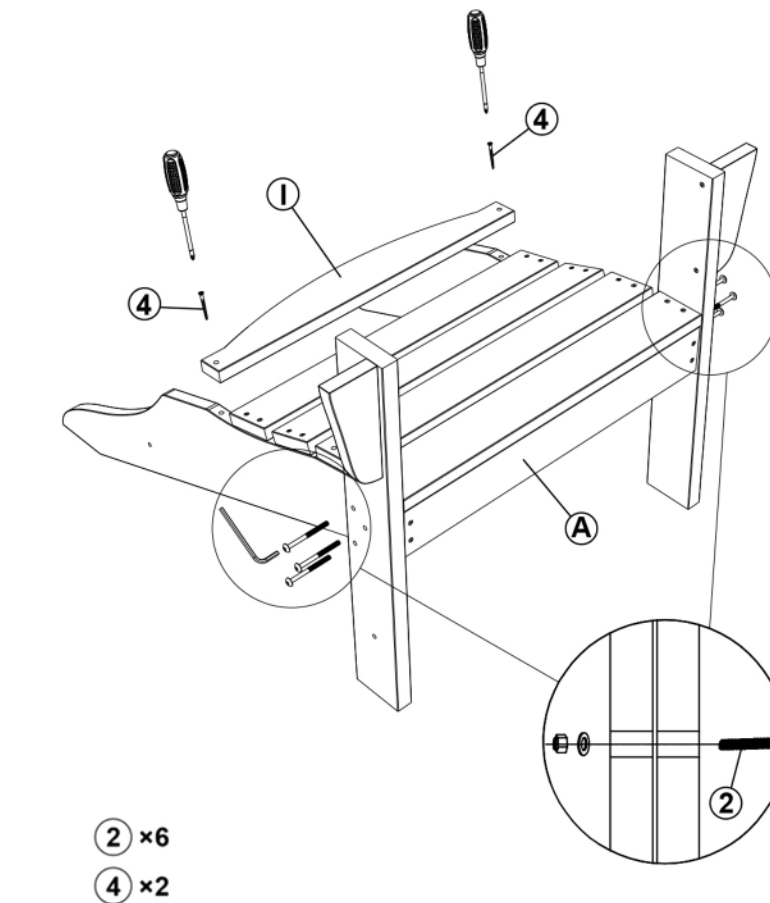

STEP 1

- Attach "Back Seat Rail (I)" to "Chair Seat Frame (A)" - Using "4 M5 x 40MM Screws", tighten with screwdriver.


- Attach "Chair Legs (E/F)" to "Chair Seat Frame (A)" - Using "2 M6 x 60MM Bolts & Washer & Nut", tighten with hex key and wrench.

2 x 6
4 x 2

STEP 2

- Attach "Front Stretcher (G)" to "Chair Legs (E/F)" - Using "1 M6 x 40MM Bolts", tighten with hex key.

- Attach "Chair Arms (C/D)" to "Chair Legs (E/F)" - Using "2 M6 x 60MM Bolts & Washer & Nut", tighten with hex key and wrench.

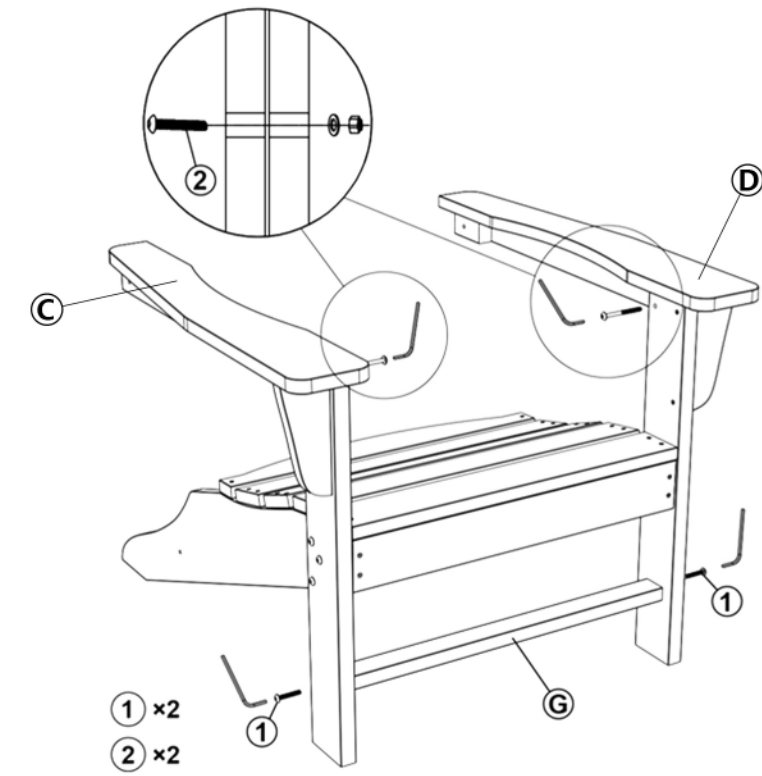


1 x 2
2 x 2

Assembly Instructions

If you need help or have damaged or missing parts,
please email: SERWALL@patioadirondack.com

⚠ Caution: Please do not over-tighten bolts and screws during assembly.

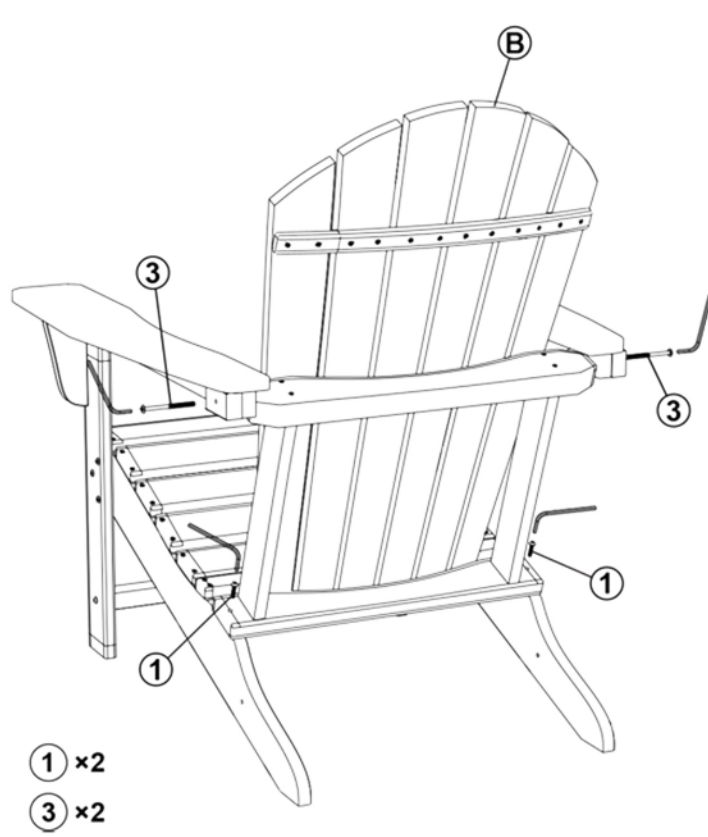

STEP 3


- Attach "Chair Back (B)" to "Chair Arms (C/D)" - Using "3 M6 x 70MM Bolts", tighten with hex key.

- Attach "Chair Back (B)" to "Chair Seat Frame (A)" - Using "1 M6 x 40MM Bolts", tighten with hex key.

1 x 2
3 x 2

STEP 4

- Attach "Back Stretcher (H)" to "Chair Seat Frame (A)" - Using "1 M6 x 40MM Bolts", tighten with hex key.

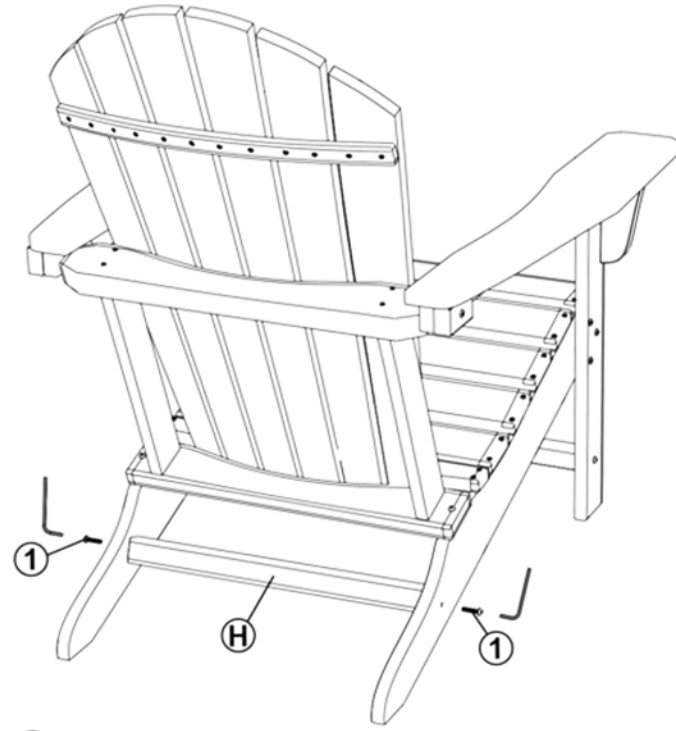

1 x 2