


ADIRONDACK ROCKING CHAIR

Assembly Instructions

A041-084-001

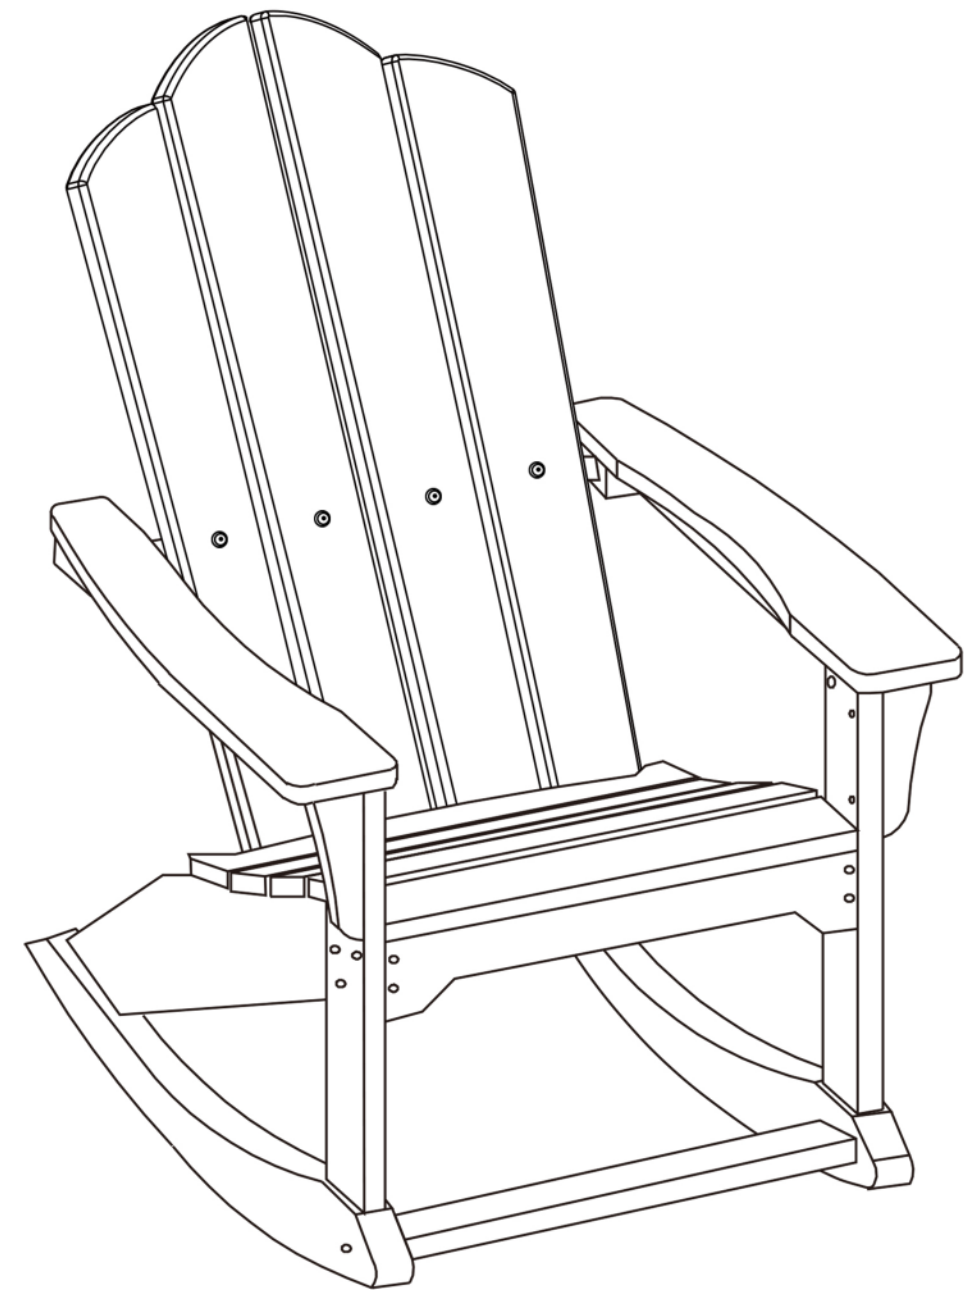

Important - Please read these instructions fully before starting assembly

HASSLE-FREE WARRANTY

Serwall stand behind the quality of our products.
For full warranty policy.



350 LBS
CAPACITY



1 PERSON
ASSEMBLY




AROUND 25 MIN.
ASSEMBLY

1

Components

Please check you have all the components listed below.


Note:The illustration of the product shows the exact position of each part. Check when assembling.

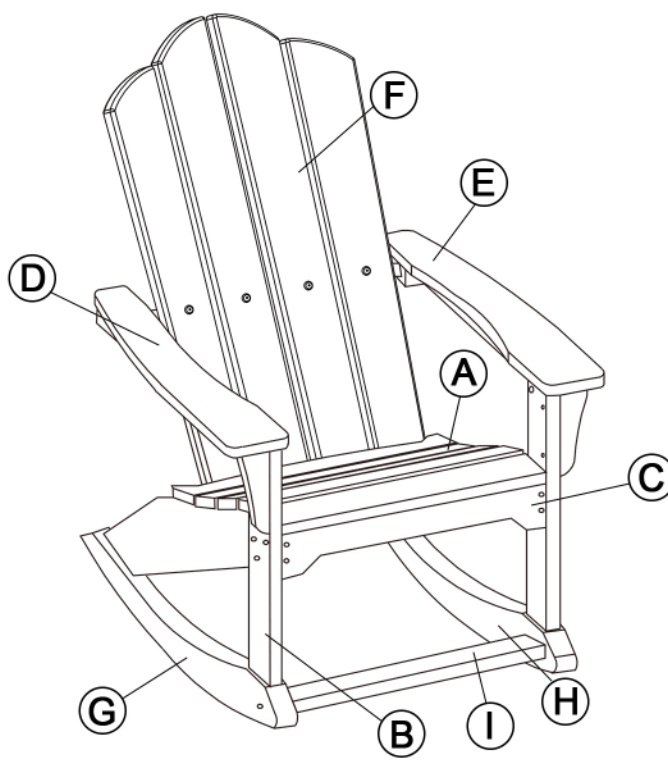


#	Description	Qty.
A	Seat Frame	1
B	Right Leg	1
C	Left Leg	1
D	Right Arm	1
E	Left Arm	1
F	Backrest	1
G	Right Runner	1
H	Left Runner	1
I	Front bezel	1

Hardware & Tools


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than required.

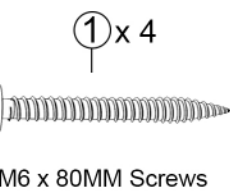


M6 x 80MM Screws

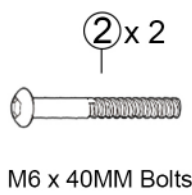


M6 x 40MM Bolts

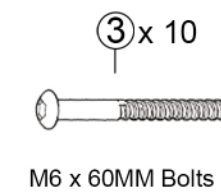


M6 x 60MM Bolts

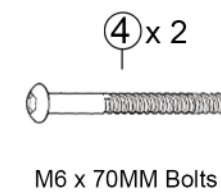


M6 x 70MM Bolts

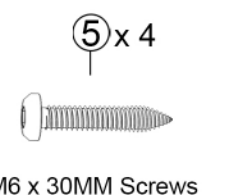

M6 x 30MM Screws

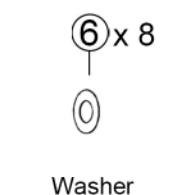

Washer

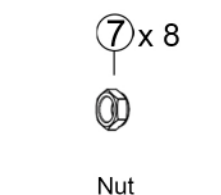

Nut



Screwdriver(Included)



Wrench(Included)




Hex Key(Included)

2

Assembly Instructions


Caution: Please do not over-tighten bolts and screws during assembly.

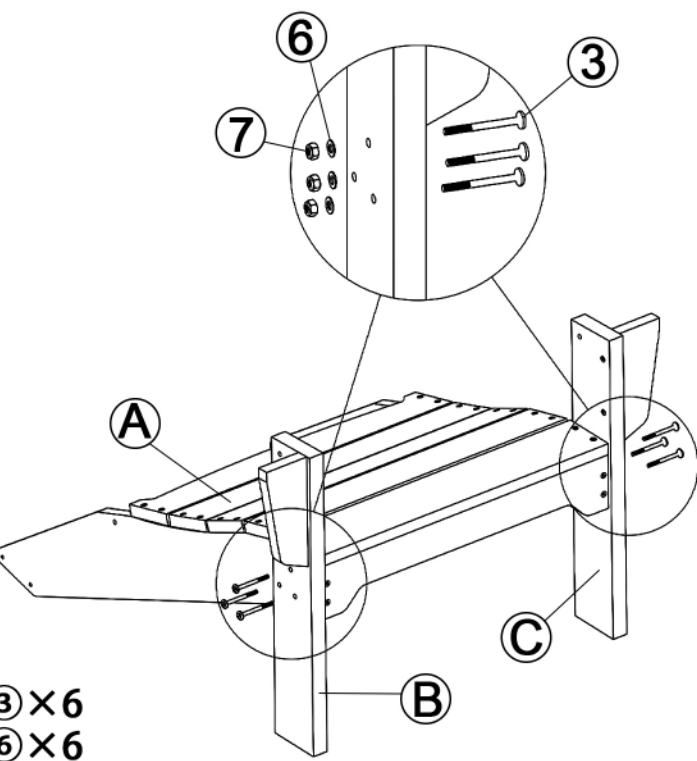

3 x 6
6 x 6
7 x 6

STEP 1

●Attach "Chair Legs (B/C)" to "Seat Frame (A)" - Using "3 M6 x 60MM Bolts" with "6 Washer" and "7 Nut", tighten with hex key and wrench.

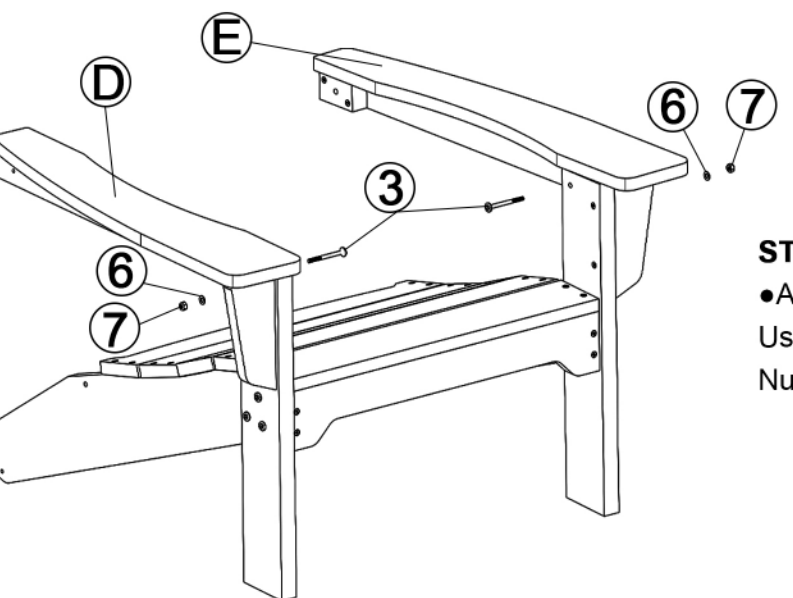

3 x 2
6 x 2
7 x 2


STEP 2

●Attach "Chair Arms (D/E)" to "Chair Legs (B/C)" - Using "3 M6 x 60MM Bolts" with "6 Washer" and "7 Nut", tighten with hex key and wrench.

3

Assembly Instructions

Caution: Please do not over-tighten bolts and screws during assembly.

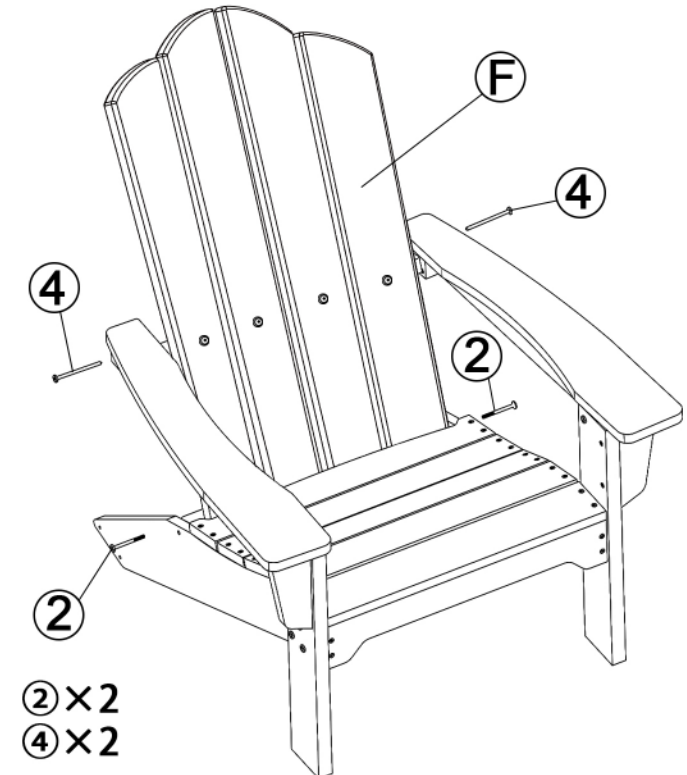


2 x 2
4 x 2

STEP 3

●Attach "Backrest (F)" to "Chair Arm (D/E)" - Using "2 M6 x 70MM Bolts", tighten with hex key.

●Attach "Backrest (F)" to "Seat Frame (A)" - Using "2 M6 x 40MM Bolts", tighten with hex key.

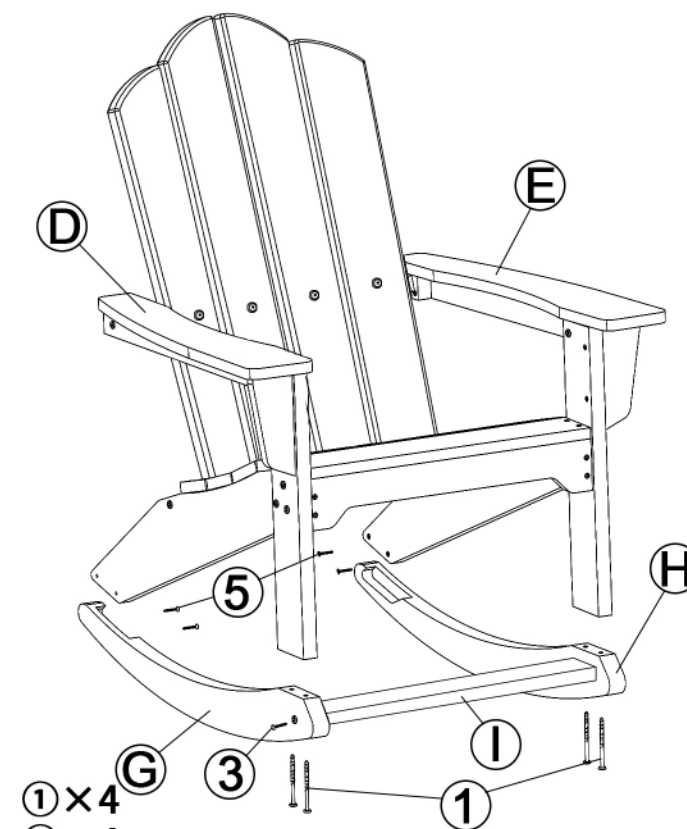

1 x 4
5 x 4
3 x 2

STEP 4

●Attach "Runners (G/H)" to "Chair Legs (B/C)" - Using "1 M6 x 80MM Screws", tighten with hex key.

●Attach "Runners (G/H)" to "Seat Frame (A)" - Using "5 M6 x 30MM Screws", tighten with screwdriver.

●Attach "Runners (G/H)" to "Front bezel (I)" - Using "3 M6 x 60MM Bolts", tighten with screwdriver.

4

Warnings

If you need help or have damaged or missing parts, please email: SERWALL@patioadirondack.com

Important - Please read these instructions fully before starting assembly

Check you have all the components and tools listed on the page 2.

Remove all fittings from the plastic bags and separate them into their groups.

Keep children and animals away from the work area, small parts may cause choking if swallowed.

Make sure you have enough space to layout the parts before starting.

Assemble on a soft level surface to avoid damaging the unit or your floor.

Do not stand or put weight on the product, this could cause damage.

Assemble the item as close to its final position (in the same area) as possible.

Do not place furniture directly in front of radiators, fires, or any other source of heat.



The assembly will be easier with 2 people while 1 person could also do the job.



Refer to the LISTING page for specific installation videos.

Cleaning & Maintenance

●Clean the product with a solution of mild soap and water. Dip a soft cloth or sponge into the solution and wipe down the entire surface.

●After cleaning, thoroughly rinse the furniture with water to remove any remaining soap residue.

●When not in use, cover the lounge chair with a protective cover to keep it clean and prolong its lifespan.

5